



Open: 24 hours a day/  
7 days a week  
ph: 808-594-0849



## Kewalo Harbor Pump Out Services

### Steps to pump out:

1. Shut down your engines and blowers and make sure your vessel is tied securely to the dock.
2. Locate the pump-out deck plate for your vessel.
3. Wearing gloves is highly recommended while using the pump-out station.
4. Retrieve the pump hose and put it on the dock or on your boat so it is as near as possible to your pump-out deck plate.
5. Remove the deck plate cover with a deck plate key.
6. Screw in the adapter until the gasket is compressed. Don't over-tighten.
9. Place the nozzle over the adapter and push in the two locking levers until they are flat against the nozzle.
10. Open the valve by the nozzle and press the "on" button for the pumping station.
11. There is a clear window that will let you see when most of the contents have been removed.
12. When there is little flow, run your head on the "wet" setting for a few seconds to flush clean water through the tank.
13. Close the valve by the nozzle. Remove the nozzle and rinse it in the bucket of water on the dock.
14. Replace the hose.
15. Rinse the adapter and put the cover (if available) on the adapter and unscrew it from the deck plate. Re-stow the adapter.

From 7am-4pm, we can assist you in pumping out. We do have adapters available to use. To purchase your own adapter, you can visit [pumpahead.com](http://pumpahead.com) or [amazon.com](http://amazon.com).